




FURNISYS
Functional Furniture Systems

Wall Mounted Pegboard Panel

Installation Instruction Manual

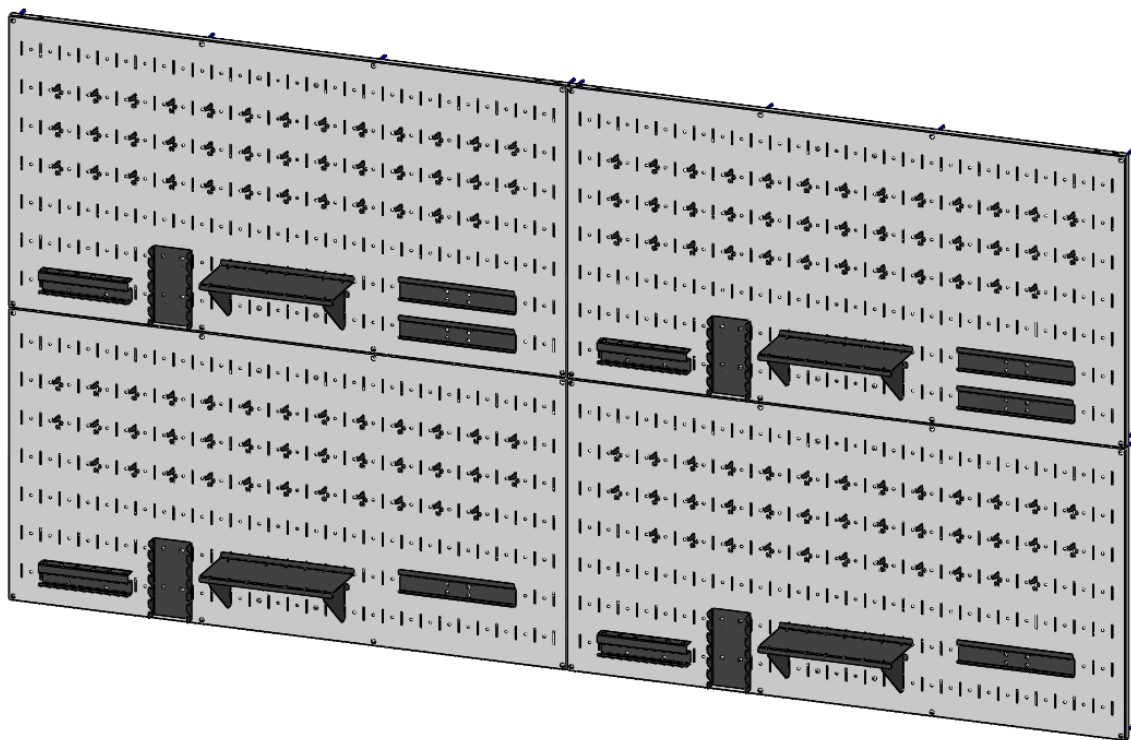

Company Name : **Fab Tech India**

Website : <https://www.furnisys.co>

Table of Contents

1. Introduction	page 3
2. Safety Precautions	page 3
3. Tools Required	page 3
4. Wall mounted Pegboard panel Components	page 4
5. Step-by-Step Assembly Instructions	page 5
5.1 Unboxing and Parts check	page 5
5.2 Pegboard Panel Assembly	page 5
5.3 Wall Mounting	page 7
5.4 Tray assembly Installation	page 8
5.5 Pegboard accessories installation	page 9
6. Additional Notes	page 12
7. Maintenance & Care	page 12
8. Warranty & Support	page 12
9. Feedback	page 12

1. Introduction

This Installation manual provides detailed instructions for installing the Wall mounting Pegboard panel.

Follow these instructions carefully to ensure proper and safe assembly. Should you encounter any issues, please contact our technical support team.

2. Safety Precautions

Please read the following safety instructions before starting installation :

Important Safety Guidelines:

Assemble the Product on a stable, flat surface.

Due to sharp sheet metal edges, **Furnisys strongly recommends the use of gloves** while handling and installing metal pegboard panels.

Ensure the workspace is clear of unnecessary objects to prevent accidents.

Follow each step thoroughly to avoid damage to components and to ensure personal safety.

3. You Will Need : (Not Included)

You will need the following tools & Hardware to assemble & install the Product :



General Tool Kit



Measuring Tape



Screwdrivers



Allen key



Hammer (optional)

4. Wall mounted Pegboard panel Accessories :

SR. NO	PRODUCT NAME
1	Wall Mounted Pegboard Panel (WM-PP)
2	Tray Assembly (PBA-TA)
3	Medium slotted hook (PBA-MSH)
4	Standard slotted hook (PBA-SH)
5	Spanner Tray (PBA-ST)
6	Bin Strip (PBA-BS)
7	Screw Driver holder (PBA-SDH)
8	Allen key holder (PBA-AKH)

5. Step-by-Step Assembly Instructions


5.1 Unboxing and Parts Check

Unbox the Product and verify that all components are included according to the parts list.


Note: Due to sharp sheet metal edges, **Furnisys strongly recommends the use of gloves** while handling and installing metal pegboard panels.

5.2 Wall mounted pegboard panel : Pegboard Panel Assembly

Step 1: Align the Panel stiffener with the given holes in Pegboard as per required and Insert M6X15 Allen dome head screw through Pegboard panel and panel stiffener.

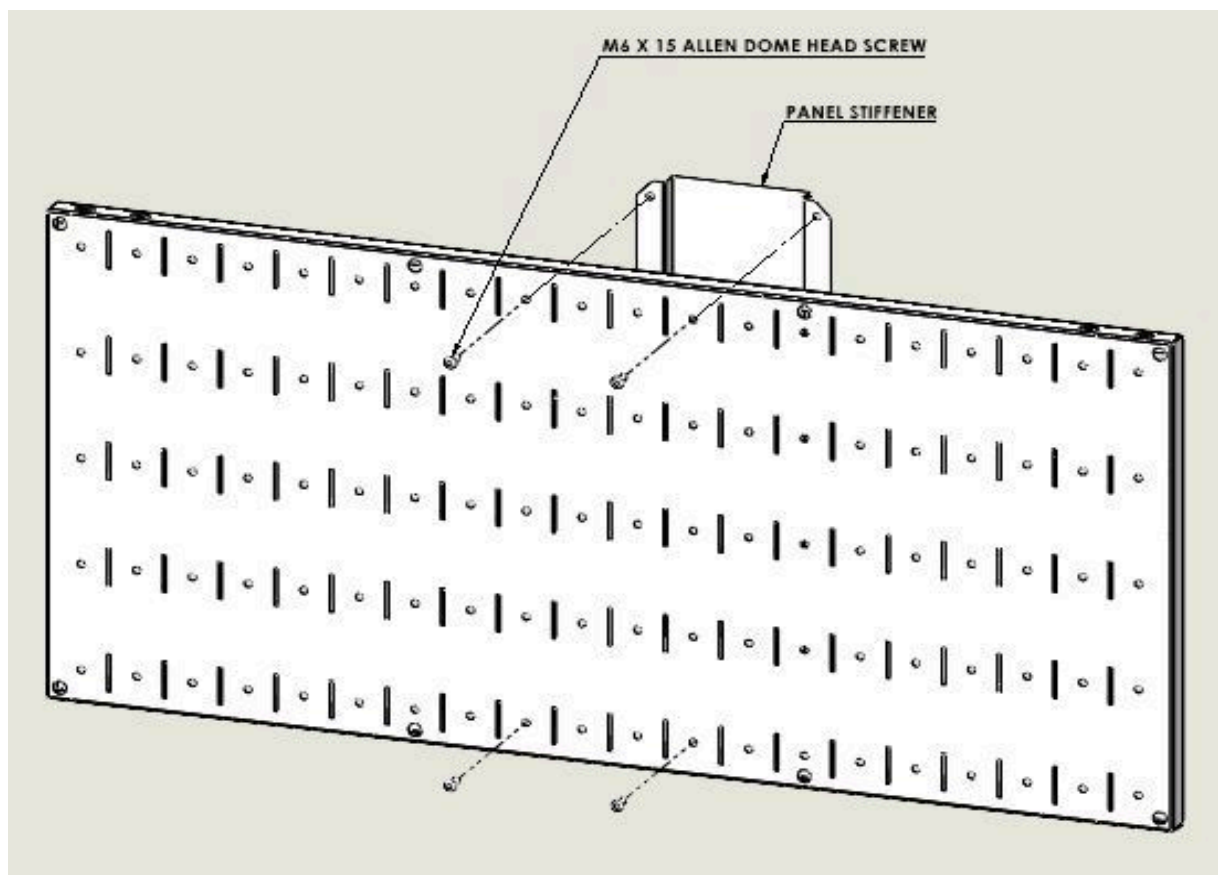

Step 2: Align and fasten the M6 Hex nut with M6X15 Allen dome head screw from behind as shown.

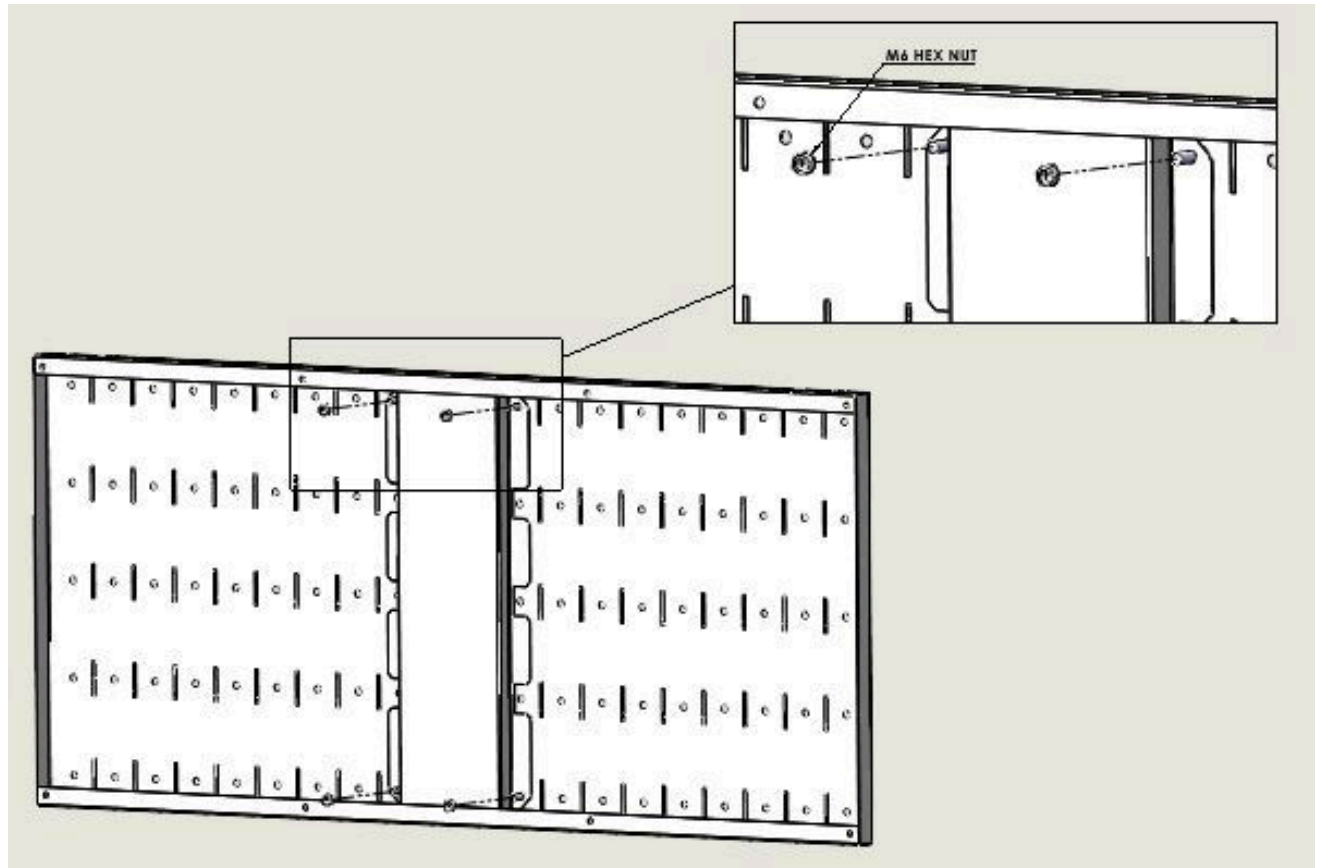

5.3 Wall mounted pegboard panel : Wall Mounting



Step 1: Position the Pegboard panel on the wall, mark the hole locations as per the Pegboard panel, and then remove the panel.

Note - Pegboard slots should always be in the vertical position as shown in the image.

Step 2: Drill holes in the wall as per the provided 8x60 anchor plug specifications. Insert the anchor plugs into the drilled holes.


Step 3: Align the Pegboard panel with the anchor plugs fixed in the wall, then use No. 8x60 CSK screws to secure the Pegboard panel to the wall as shown.

Note: Insert the No. 8x60 CSK screws through the front of the Pegboard panel.

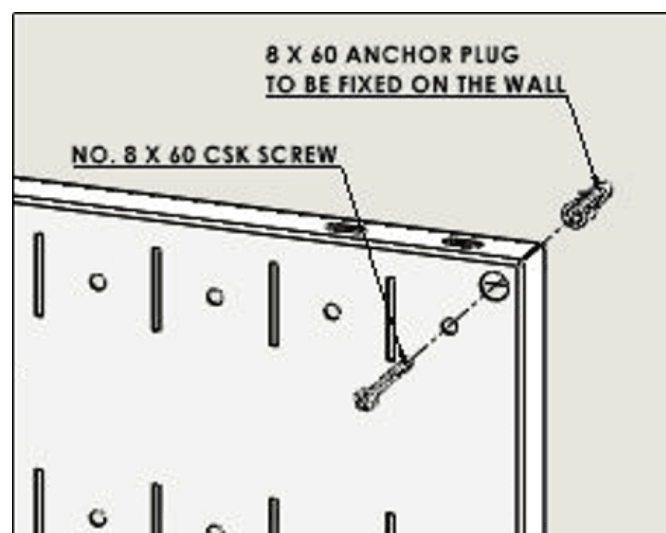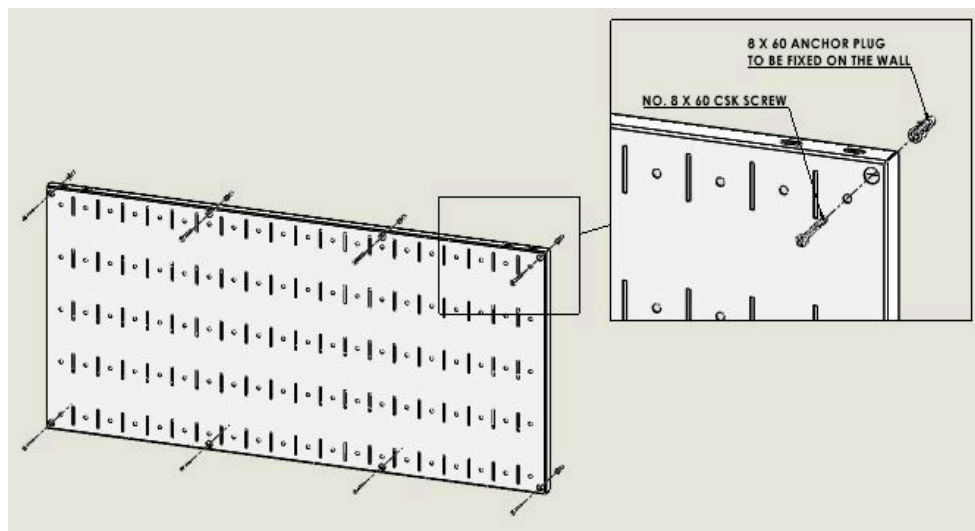


5.4 Wall mounted pegboard panel : Tray assembly Installation

Step 1: Insert the Mounting bracket at the required slots according to the tray and Pull down to fit.

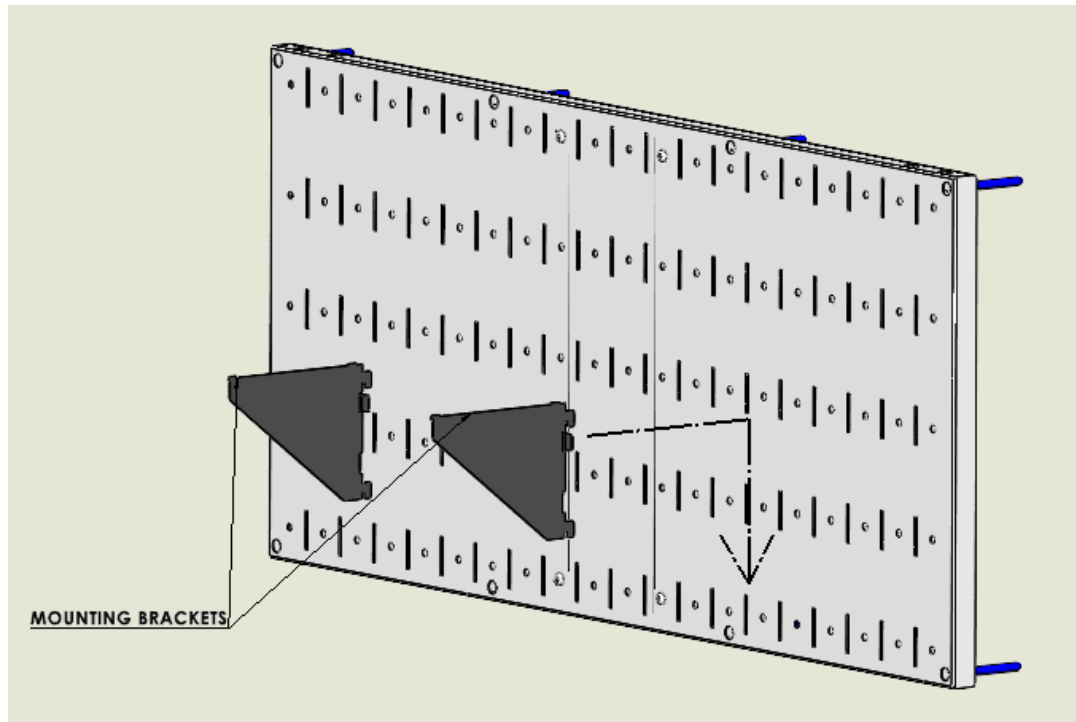


Step 2: Align and place the Tray base on the Mounting brackets as shown

Note - Front & Back notch of the bracket should be inserted in slots of tray.

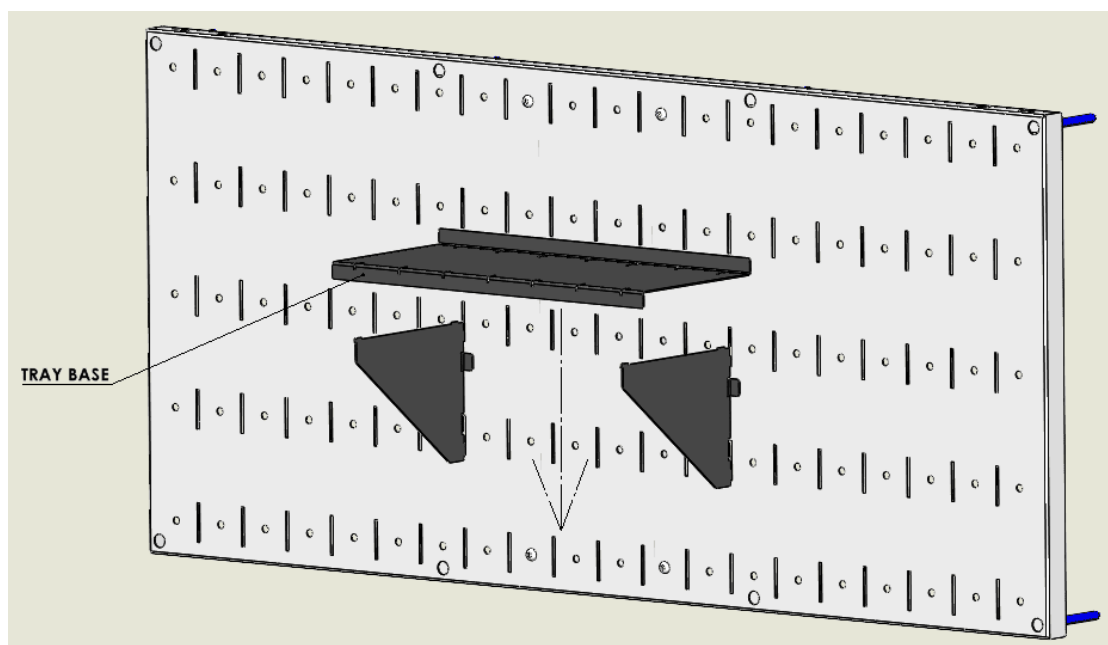


5.5 Wall mounted pegboard panel : Pegboard accessories installation.


Step 1: Insert the accessories at an inclined angle as shown in the required slots.

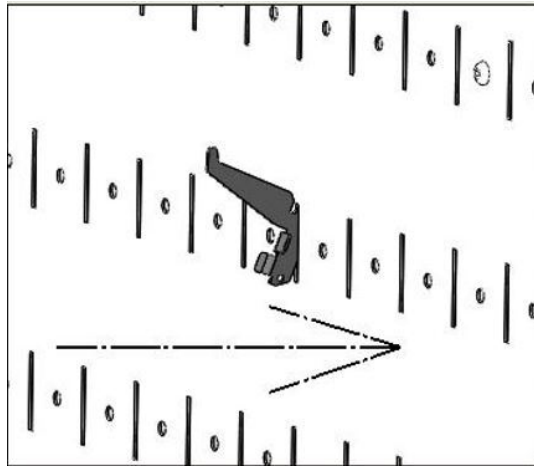


MEDIUM / STANDARD SLOTTED HOOK

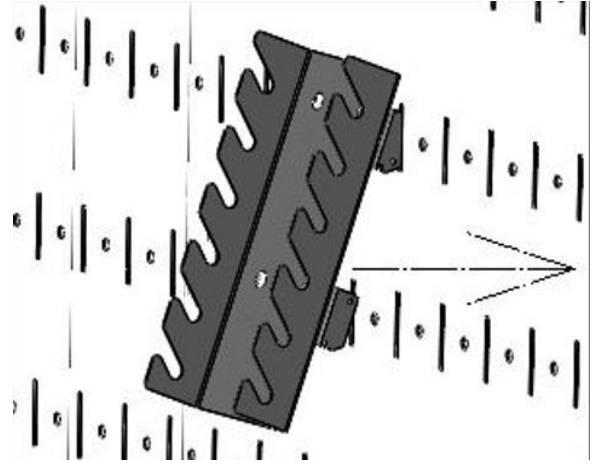

SPANNER TRAY

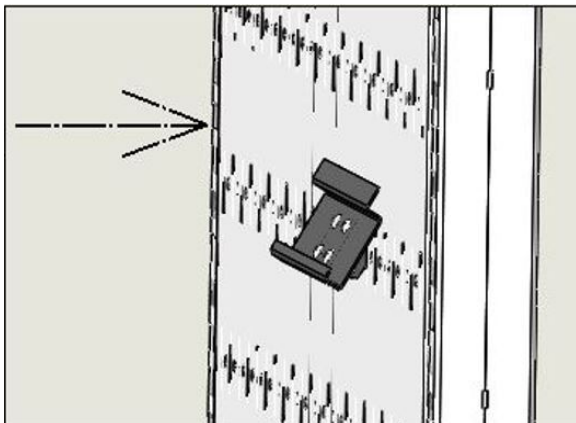


BIN STRIP

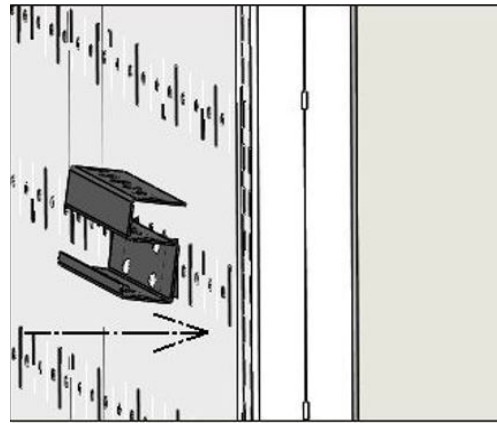


**SCREW DRIVER HOLDER / ALLEN KEY
HOLDER**


Step 2: After inserting the accessories in the Slot of the Pegboard panel, straighten it as shown.

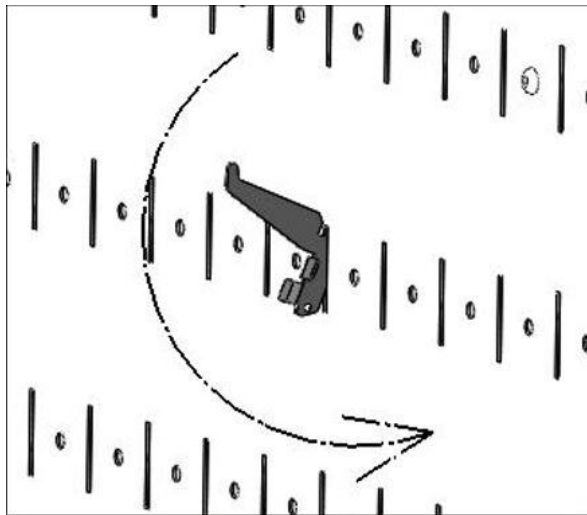


MEDIUM / STANDARD SLOTTED HOOK

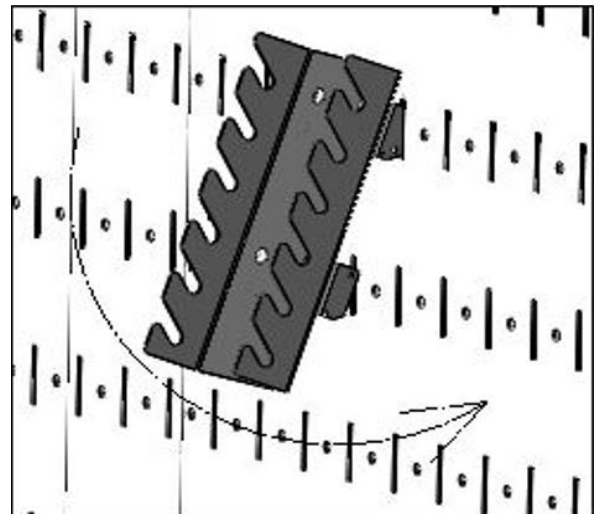

SPANNER TRAY

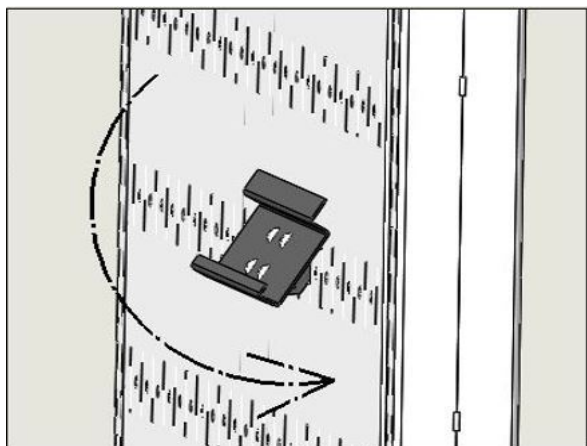


BIN STRIP

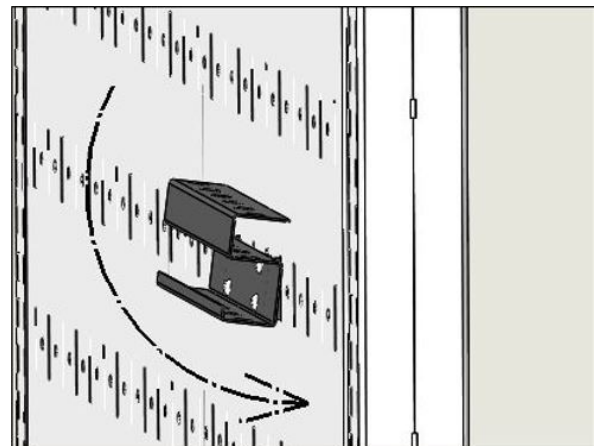


**SCREW DRIVER HOLDER / ALLEN KEY
HOLDER**


Step 3: After straightening the accessories, Pull down the accessories to fit it in the Slot properly.

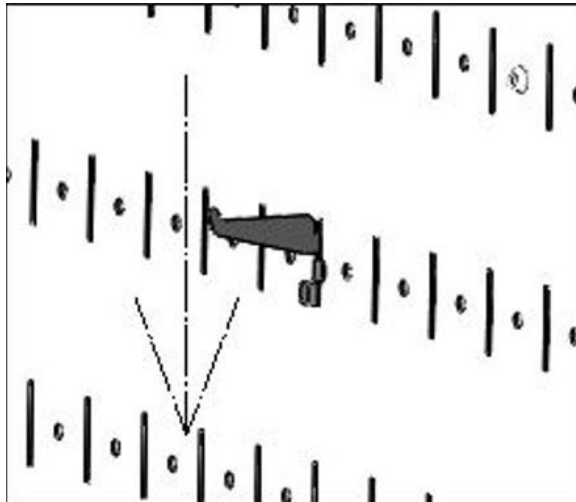


MEDIUM / STANDARD SLOTTED HOOK

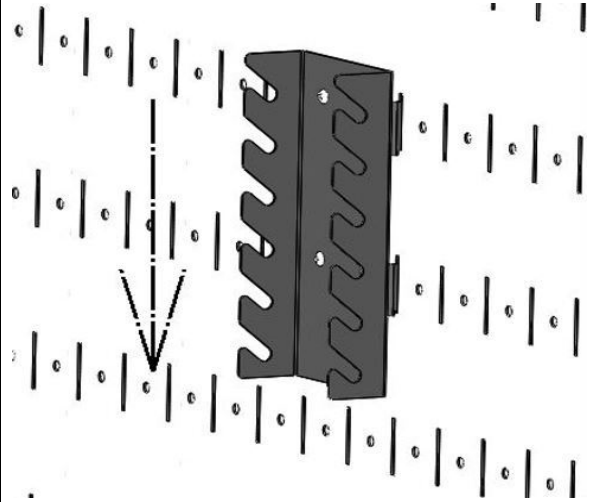

SPANNER TRAY

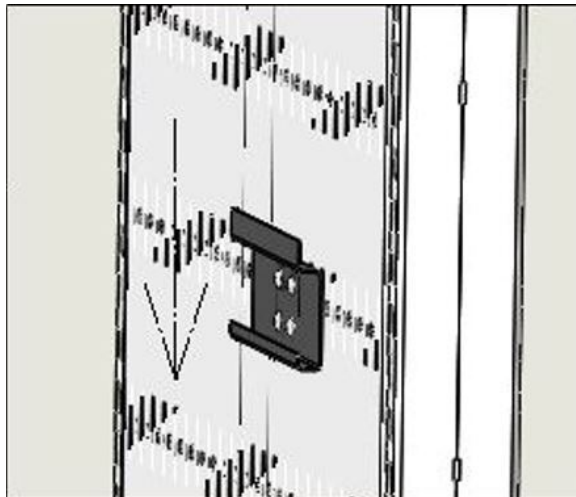

BIN STRIP

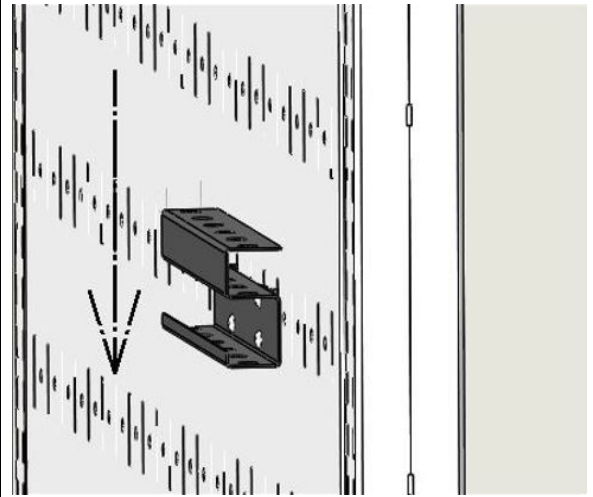

**SCREW DRIVER HOLDER / ALLEN KEY
HOLDER**

Note: Actual product may vary from photos.

6. Additional Notes

- Ensure all screws are fully tightened after assembling the entire frame and components.
- Double-check the alignment of all components to prevent misalignment.
- Follow the assembly sequence to avoid confusion and maintain structural integrity.

7. Maintenance & Care

- To keep your Product in top condition, follow these maintenance tips:
- Clean with a damp cloth to avoid dust buildup.
- Avoid using abrasive cleaners or chemicals.
- Regularly check that screws are tight and that parts are properly aligned.

8. Warranty & Support

If you encounter any issues during assembly or use, please contact our customer support team for assistance.

9. Feedback

We value your feedback! Please let us know about your experience with the assembly process and the product itself.

Submit feedback at the company website. / feedback or email us.

Thank you for choosing Furnisys. We hope you enjoy your new Product.